

Advanced Diagnostic Center VERUS Edge Display Setting

If you experience erratic monitor display behavior when redocking the VERUS Edge display unit to the docking station, use the following instructions to correct the display.

Erratic display behavior may include:

- stretched or compressed screen
- screen not visible
- incorrect aspect ratio

Monitor Display Setting

1. From the Windows® desktop taskbar, click on the *Intel® HD Graphic* icon (Figure 1-1), to open the graphics settings menu.

Taskbar Icon



Figure 1-1

2. From the graphics settings menu options select **Graphic Options > Panel Fit > Monitor > Maintain Display Scaling** (Figure 1-2).

Menu Navigation

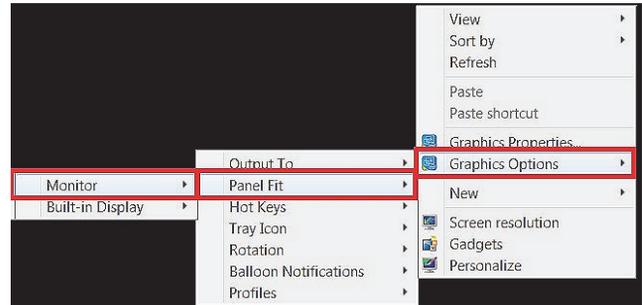


Figure 1-2

3. Then select **Maintain Display Scaling**, and check the options box (Figure 1-3).

Maintain Display Scaling Option Selected



Figure 1-3

4. Exit the menu.

The display setting will be retained, once set.